



Face Frame Style Lazy Susan Assembly

Step 1: Place Lazy Susan Bearings on Adjoint Panel rotating 45 degree offset to attach

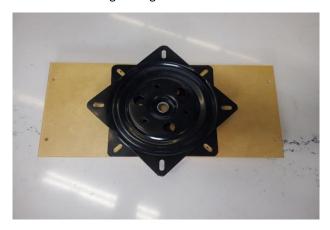

Step 2: Place Lazy Susan Berings on Tray with 2 of 4 screw holes showing and attach

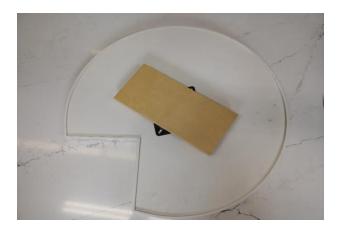

Place Adjoining Panel on Shelf rotating Lazy
Step 4: Susan Tray with 1 of 4 screw holes showing
and attach



Parts List

- 1 Lazy Susan Bearings
- 1 Adjoining Panel
- 1 Lazy Susan Tray
- 1 Shelf

Screws

Step 3: Rotate Adjoining Panel 90 degrees attach remaining screws



Rotate Lazy Susan Tray and attach
Step 5: remaining screws. (Repeat until all 4 screws are attached)



604-746-9858 info@macancabinets.com